

JUNK SUB

Other names : Boot Basket, Junk Basket

DESCRIPTION

The Junk Sub is designed to catch junk pieces which are too large to circulate out of the hole during drilling, milling or junk fishing operations.

USE

It should be run single or in tandem in the drill collar string, just above a milling tool or drill bit.


The design of the junk sub traps work by producing a sudden decrease of the annular velocity when the cuttings pass the larger OD of the boot reaching the smaller OD of the top body.

Boot baskets in tandem operation increases junk catching capacity for greater operational efficiency.



STANDARD SPECIFICATIONS

Hole Size	4-1/2"	5-1/2" - 7"	8-1/2" - 11"	12-1/4" - 16"	17-1/2" - 22"
OD Cup	3-1/2"	4-7/8"	7-1/4"	9-5/8"	14-3/4"
OD body (fishing neck)	3-1/18"	4-3/4"	6-1/2"	8"	9-1/2"
Connection	2-3/8" REG	3-1/2" REG	4-1/2" REG	6-5/8" REG	7-5/8" REG

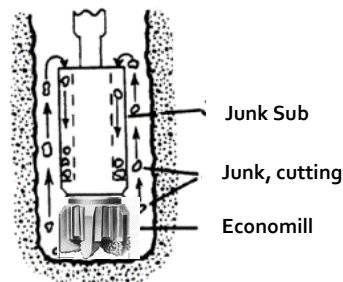

YOU MAY ALSO BE INTERESTED BY :

- Economill
- Junk Mill, Super Junk Mill
- Reverse Circulating Junk Basket